

Bead Sealer Instructions



These instructions apply to all 31Inc Bead Sealer.

For more information call 1.800.438.3302
For SDS Information Visit www.31inc.com

Directions

1. **CLEAN** tire/rim sealing area free from any debris, dirt or residue.
2. Brush apply a light coat of **BEAD SEALER** on the outside of the bead sealing area of the tire. Avoid puddling or bubbling.
3. Re-inflate the tire and carefully check for leaks. If needed, apply a second coat of **BEAD SEALER** to the tire/rim sealing area.

For more information,
call (800) 438-3302.

REV 03.07.2016